


Weather Station (SLW5) Error Troubleshooting Chart



Weathermatic Tech Support
888-484-3776 option 1

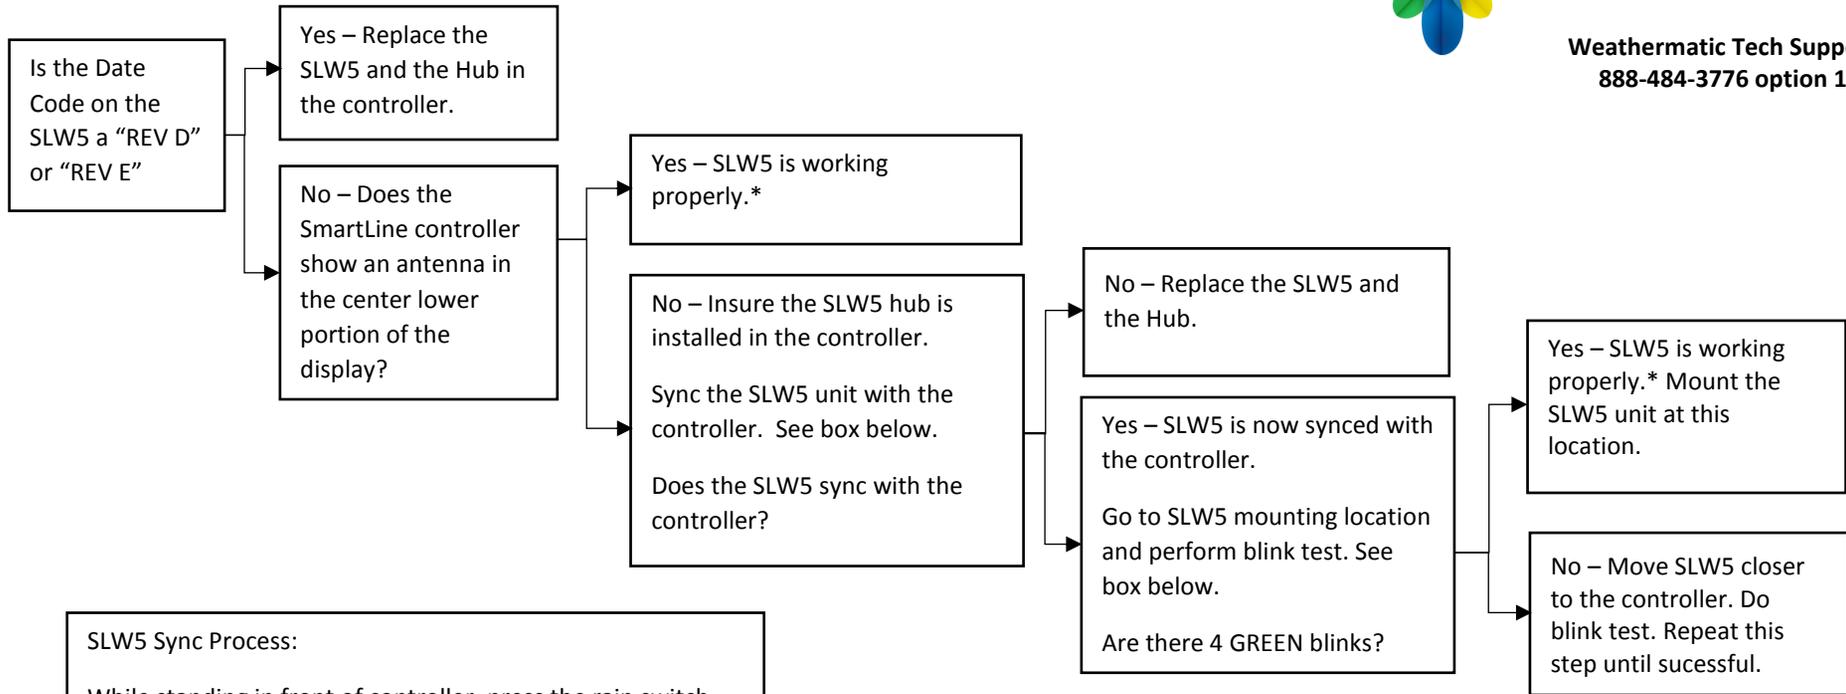

SLW5 Sync Process:

While standing in front of controller, press the rain switch spindle on the top of the SLW5 for 15 seconds

Watch for a blinking antenna in the SmartLine display.

The antenna should appear with "antenna waves" blinking.

SLW5 Blink Test Process:

While standing at the SLW5 mounting location, press the rain switch spindle on the top of the SLW5 for 15 seconds

Watch the LED which is visible through the openings in the cover at the bottom of the SLW5.

You will see 4 blinks. All blinks should be Green.

Tools You Will Need

- (1) Spare SLW5 and Hub
- (1) Ladder for mounting SLW5 unit

*If SLW5 is showing battery low alert, replace batteries. Note SLW5 batteries should last ~7-10 years. If battery drain is premature, replace SLW5 unit and Hub.